

九、零件样本


IX. COMPONENT EXAMPLE

1、机壳部件 Components of Housing

序号 Seri No.	图 号 Code No.	名 称 Description	适用产品 Products applicable			
			曲折缝 Curved- stitching	数量 Qty	双针曲折缝 Double Curved- stitching	数量 Qty
1	U43T1-0	机壳 Housing	√	1	√	1
2	U43T1-1-3	铭牌 Model-plate	√	1	√	
3	U43T1-1-7	铭牌铆钉 Model-plate river	√	2	√	2
4	U43T1-1-8	铭牌 Model-plate			√	1
5	U43T1-2-1	面板 Face plate	√	1	√	1
6	U43T1-2-3	面板线勾 Face plate thread guide	√	1	√	1
7	U43T1-2-2	面板线勾螺钉 thread guide screw	√	1	√	1
8	U43T1-2-3	面板线勾螺母 thread guide nut	√	2	√	2
9	U43T1-3	面板螺钉 Face Plate screw	√	2	√	2
10	U43T1-4	直缝锁紧偏心螺钉 Linear lock eccentric screw	√	1	√	1
11	U43T1-5	直缝锁紧偏心 Linear lock eccentric	√	1	√	1
12	U43T1-6-1	推板 Thrust plate	√	1	√	1
13	U43T1-6-2	推板簧 Thrust plate spring	√	1	√	1
14	U43T1-6-3	推板簧螺钉 Thrust plate spring screw	√	2	√	2
15	U43T1-7	针板 Needle plate	√	1	√	1
16	U43T1-8	针板螺钉 Needle plate screw	√	2	√	2
17	U43T1-9-1	针板内盖板 Inner cover plate	√	1	√	1
18	U43T1-9-2	针板内盖板簧 Cover plate spring	√	1	√	1
19	U43T1-9-3	针板内盖板螺钉 Cover plate spring Screw	√	2	√	2
20	U43T1-10	挑线杆防护罩 Thread take up lever shield	√	1	√	1
21	U43T1-11	挑线杆防护罩螺钉 Shield screw	√	1	√	1
22	U43T1-12	垫圈 Washer	√	1	√	1
23	U43T1-13	旋梭防护罩 Rotating hook shield	√	1	√	1
24	U43T1-14	旋梭护罩螺钉 Rotating hook shield screw	√	1		
25	U43T1-15	松线杠杆 Thread-releasing lever	√	1		
26	U43T1-16	松线杠杆扭簧 Thread-releasing lever spring	√	1		
27	U43T1-17	松线杠杆螺钉 Thread-releasing lever screw	√	1	√	1
28	U43T1-18	下过线钉 Lower thread-running pin	√	1		
29	U43T1-19	双过线架 Double thread-running rack	√	1	√	1
30	U43T1-20	双过线架螺钉 Thread-running rack screw	√	1	√	1
31	U43T1-21	松线钉 Thread-releasing pin	√	1	√	1
32	U43T1-22	夹线器紧定螺钉 Thread-hold fixing screw	√	1	√	1
33	U43T1-19a	双过线架 Thread-running rack		1		
34	U43T1-23-1	夹线器调节座 Thread Tension regulator bushing	√	1		1
35	U43T1-23-2	夹线器螺钉紧固螺钉 Fixing screw	√	1	√	
36	U43T1-23-3	挑线簧 Thread take-up spring	√	1		
37	U43T1-23-4	夹线螺钉 Thread tension stud	√	1		
38	U43T1-23-5	夹线板 Thread tension disc	√	2		
39	U43T1-23-6	松线板 Thread tension-releasing disc	√	1		
40	U43T1-23-7	夹线簧 Thread tension spring	√	1		
41	U43T1-23-8	夹线制动板 Thumb nut revolution stopper	√	1	√	1
42	U43T1-23-9	夹线螺母 Thumb nut	√	1	√	1

序号 Seri No.	图 号 Code No.	名 称 Description	适 用 产 品 Products applicable			
			曲 折 缝 Curved- stitching	数 量 Qty	双 针 曲 折 缝 Double Curved- stitching	数 量 Qty
43	U43T1-24	上盖 Upper cover	√	1		
44	U43T1-25	上盖后螺钉 Upper cover back screw	√	1	√	1
45	U43T1-26	三眼线勾 3-eyelet hole thread guide	√	1	√	1
46	U43T1-27	三眼线勾螺钉 3-eyelet hole thread guide screw	√	1	√	1
47	U43T1-28	橡皮塞(大) Rubber plug(big)	√	1	√	1
48	U43T1-29	橡皮塞(中) Rubber plug(medim)	√	1	√	1
49	U43T1-30	橡皮塞(小) Rubber plug(small)	√	1	√	1
50	U43T1-31	上盖定位螺钉 Upper cover set screw	√	2	√	2
51	U43T1-32	上盖夹线螺钉紧定螺钉 Fastening screw	√	1	√	1
52	U43T1-33-0	上盖夹线板组件 Upper thread-guide component	√	1	√	1
53	U43T1-33-1	双眼过线板 Thread-guide			√	1
54	U43T1-33-2	上夹线螺钉 Thread-tension stud			√	1
55	U43T1-33-3	上夹线板 Upper thread-tension disc	√	2	√	2
56	U43T1-33-4	上夹线簧 Upper thread-tension spring	√	1	√	1
57	U43T1-33-5	上夹线螺母 Nut	√	1	√	1
58	U43T1-34	后盖板 Back cover	√	4	√	4
59	U43T1-35	后盖板螺钉 Back cover screw	√	1	√	1
60	U43T1-37	绕线定位块紧定螺钉 locating block set screw	√	1	√	1
61	U43T1-37-1	绕线定位块 Locating block	√	1	√	1
62	U43T1-38	绕线量调节轴 Volume-adjusting spindle	√	1	√	1
63	U43T1-39	绕线量调节轴挡圈 Washer	√	1	√	1
64	U43T1-40	调节压板螺钉 Pressing plate screw	√	1	√	1
65	U43T1-41	绕线量调节压板 Volume-adjusting plate	√	1	√	1
66	U43T1-42	绕线摆杆拉簧 Extension spring pin	√	1	√	1
67	U43T1-43	拉簧销钉 Extension spring	√	1	√	1
68	U43T1-44	绕线曲柄螺钉 Crank screw	√	1	√	1
69	U43T1-45	绕线摆杆 Thread-winding swaying handle	√	1	√	1
70	U43T1-46	绕线摆杆压簧 Swaying handle presser spring	√	1	√	1
71	U43T1-47	绕线芯轴 Axis	√	1	√	1
72	U43T1-48	绕线小轮 Thread-winding small wheel	√	1	√	1
73	U43T1-49	绕线橡皮轮 Thread-winding rull wheel	√	1	√	1
74	U43T1-50	绕线轴簧 Thread-winding axis spring	√	1	√	1
75	U43T1-51	绕线曲柄 Thread-winding crank	√	1	√	1
76	U43T1-52	夹线螺母 Thrum Nut			√	2
77	U43T1-53	夹线制动板 Thrum Nut revolution stopper			√	2
78	U43T1-54	夹线簧 Thread-tension spring			√	2
79	U43T1-55	夹线簧座 Thread-tension cover base			√	2
80	U43T1-56	夹线板 Thread-tension cover base			√	4
81	U43T1-57	上盖 Upper cover			√	1
82	U43T1-58	夹线器调节座 Thread tension regulator bushing			√	1
83	U43T1-59	挑线弹簧 Thread take up spring			√	1
84	U43T1-60	挑线弹簧螺钉 Thread take up spring screw			√	1
85	U43T1-61	挑线导线器部件 Guide component			√	1

1、机壳部件 Components of housing

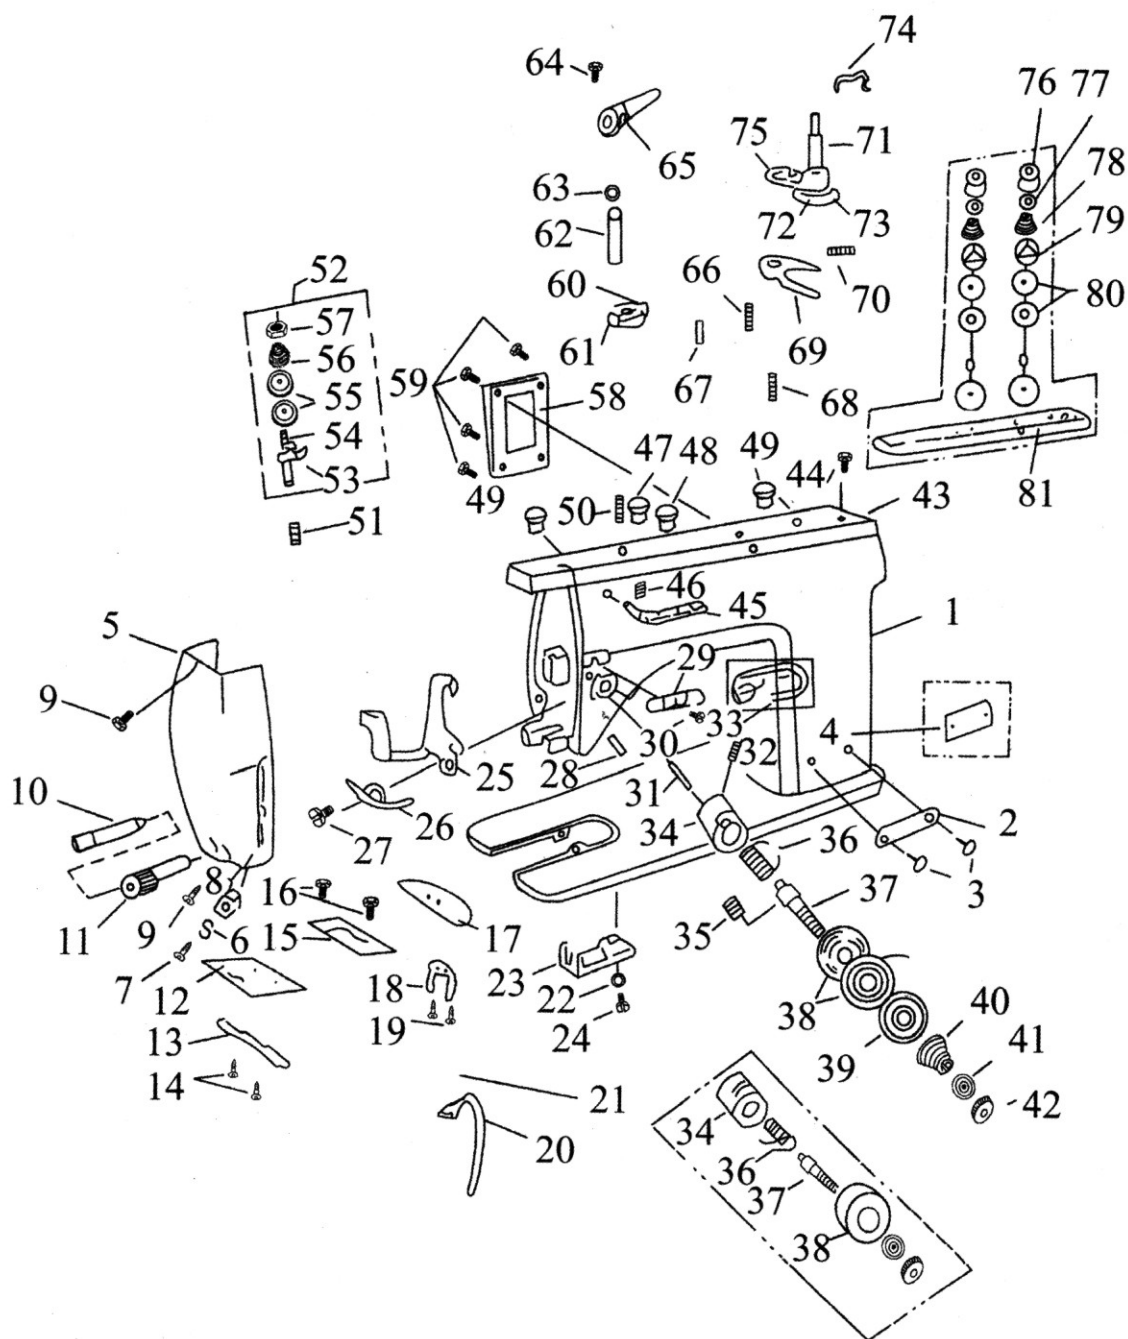


2、挑线刺料部件 Thread take up and needle bar components

序号 Seri No.	图 号 Code No.	名 称 Description	适用产品 Products applicable			
			曲折缝 Curved- stitching	数量 Qty	双针曲折缝 Double Curved- stitching	数量 Qty
1	U43T2-2	针杆摆动销螺钉 Pin screw(swaying rack of needle staff)	√	1	√	1
2	U43T2-3	针杆摆动架 Swaying rack of needle bar	√	1		
3	U43T2-4	针杆偏心销螺钉 Eccentric pin screw of needle bar	√	1	√	1
4	U43T2-5	针杆定位片 Locating plate of needle bar	√	1	√	1
5	U43T2-6	针杆定位片螺钉 Screw of locating plate	√	1	√	1
6	U43T2-7	针杆摆动架销 Pin of swaying rack (needle bar)	√	1	√	1
7	U43T2-8	针杆 Needel bar	√	1		
8	U43T2-9	针杆线勾 Thread-guide of needle bar	√	1		
9	U43T2-10	机针 Needle	√	1	√	2
10	U43T2-11	机针紧定螺钉 Locking screw of needle	√	1		
11	U43T2-12	针杆连接轴销螺钉 Pin-screw of connecting shaft	√	1	√	1
12	U43T2-13	针杆连接轴销垫圈 Pin-washer of connecting shaft	√	1	√	1
13	U43T2-14	针杆连接轴体 Connecting shaft	√	1	√	1
14	U43T2-15	针杆连接轴销 Pin of connecting shaft	√	1	√	1
15	U43T2-16	针杆连接轴销紧定螺钉 Pin-locking screw of connecting shaft	√	1	√	1
16	U43T2-17	小连杆导板 Guide of small connecting staff	√	1	√	1
17	U43T2-18	小连杆导板螺钉 Screw of guide	√	2	√	2
18	U43T2-19	小连杆导板垫圈 Guide washer	√	2	√	2
19	U43T2-20-0	挑线杆组件 Thread take-up lever component	√	1	√	1
20	U43T2-20-1	倒牙螺钉 Left-spiral screw	√	1	√	1
21	U43T2-20-2	小连杆 Small connecting staff	√	1	√	1
22	U43T2-20-3	针杆曲柄 Crank of needle bar	√	1	√	1
23	U43T2-20-4	挑线杆 Thread take-up lever component			√	1
24	U43T2-20-5	挑线摇杆 Stitch-swaying staff	√	1	√	1
25	U43T2-20-6	挑线摇杆销 Pin of swaying staff	√	1	√	1
26	U43T2-20-7	挑线摇杆销螺钉 Pin screw of swaying staff	√	1	√	1
27	U43T2-20-8	挑线曲柄螺钉 Screw of crank	√	1	√	1
28	U43T2-20-9	挑线曲柄 Crank	√	1	√	1
29	U43T2-20-10	针杆曲柄紧固螺钉 Crank fastening screw	√	1	√	1
30	U43T2-20-11	挑线杆 Thread take-up lever	√	1		
31	U43T2-21	上轴前轴套紧定螺钉 Fastening screw(of front sleeve)	√	1	√	1
32	U43T2-22	上轴前轴套 Front sleeve of upper shaft	√	1	√	1
33	U43T2-23	上轴螺旋齿轮螺钉 Screw of spiral gear	√	2	√	2
34	U43T2-24	上轴螺旋齿轮 Spiral gear of upper shaft	√	1	√	1
35	U43T2-25	上轴弧齿锥齿轮螺钉 Screw of arc-cone gear	√	2	√	2
36	U43T2-26	上轴弧齿锥齿轮 Arc-cone gear (upper shaft)	√	1	√	1
37	U43T2-27	送布凸轮螺钉 Screw of feed cam	√	2	√	2
38	U43T2-28	送布凸轮 Feed cam	√	1	√	1
39	U43T2-29	上轴 Upper shaft	√	1	√	1

序号 Seri No.	图 号 Code No.	名 称 Description	适 用 产 品 Products applicable			
			曲 折 缝 Curved- stitching	数 量 Qty	双 针 曲 折 缝 Double Curved- stitching	数 量 Qty
40	U43T2-30	上轴后轴套 Back sleeve of upper shaft	√	1	√	1
41	U43T2-31	上轴后轴套螺钉 Fastening screw of back sleeve	√	1	√	1
42	U43T2-32	上轮套筒 Sleeve of balance wheel	√	1	√	1
43	U43T2-33	上轮套螺钉 Sleeve screw	√	1	√	1
44	U43T2-34	上轮 Balance wheel	√	1	√	1
45	U43T2-35	离合垫圈 Clutch washer	√	1	√	1
46	U43T2-36	离合螺钉 Clutch screw	√	1	√	1
47	U43T2-37	离合小螺钉 Small clutch screw	√	1	√	1
48	U43T2-39	针杆摆动架 Swaying rack of needle bar			√	1
49	U43T2-40	双针针杆 Needle har for double needle			√	1
50	U43T2-41	双针扎头紧固螺钉 Fastening screw of double needle clamber			√	1
51	U43T2-42	双针扎头 Double needle clamber (2.5mm)			√	1
52	U43T2-43	双针扎头 Double needle clamber (3.5mm)			√	1
53	U43T2-44	双针扎头 Double needle clamber (4.5mm)			√	1
54	U43T2-45	机针紧定螺钉 Fastening screw			√	2


2、挑线刺料部件 Thread take-up and needle bar components

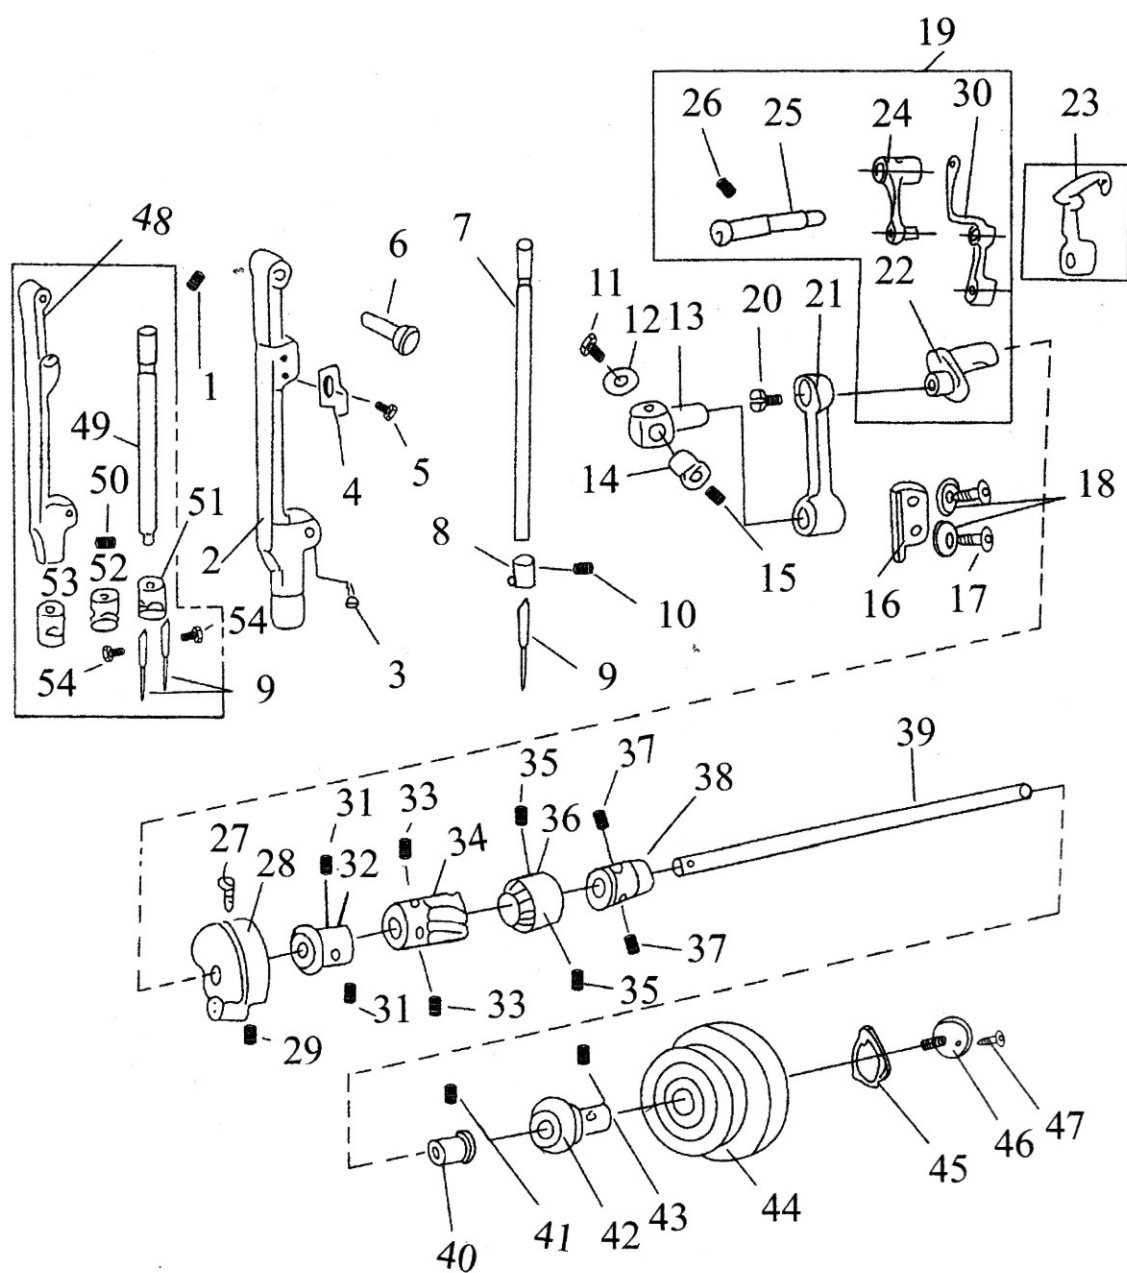

3、送料部件 Materiml-feeding components

序号 Seri No.	图 号 Code No.	名 称 Description	适 用 产 品 Products applicable			
			曲 折 缝 Curved- stitching	数 量 Qty	双 针 曲 折 缝 Double Curved- stitching	数 量 Qty
1	U43T3-1	油毡 Oil felt	√	1	√	1
2	U43T3-2	抬牙连杆组件 Lift feed connecting bar	√	1	√	1
3	U43T3-4	小圆锥螺母 Small come nut	√	4	√	4
4	U43T3-5	针距座连杆 Connecting bar of needle distance base	√	1	√	1
5	U43T3-6	小圆锥螺钉 Small cone screw	√	4	√	4
6	U43T3-7	大顶尖螺钉 Pointed screw	√	4	√	4
7	U43T3-8	大顶尖螺母 Pointed nut	√	4	√	4
8	U43T3-9	送布曲柄 Feed crank	√	1	√	1
9	U43T3-10	送布曲柄螺钉 Feed crank screw	√	1	√	1
10	U43T3-11	送布牙螺钉 Feed crank screw	√	2	√	2
11	U43T3-12	送布牙 Feed dog	√	1	√	1
12	U43T3-13	小顶尖螺钉 Pointed screw of tooth rack	√	2	√	2
13	U43T3-14	小顶尖螺帽 Point nut	√	2	√	2
14	U43T3-15	送布轴 Feed rock	√	1	√	1
15	U43T3-16	牙架 Tooth rack	√	1	√	1
16	U43T3-17	抬牙轴组件 Feed lifting rock shatt component	√	1	√	1
17	U43T3-18	抬牙曲柄螺钉 Feed lifting rock crank screw	√	1	√	1
18	U43T3-19	抬牙曲柄 Feed lifting rock crank	√	1	√	1
19	U43T3-20	牙叉 Feed fork connecting rod	√	1	√	1


3、送料部件 Materiml-feeding components

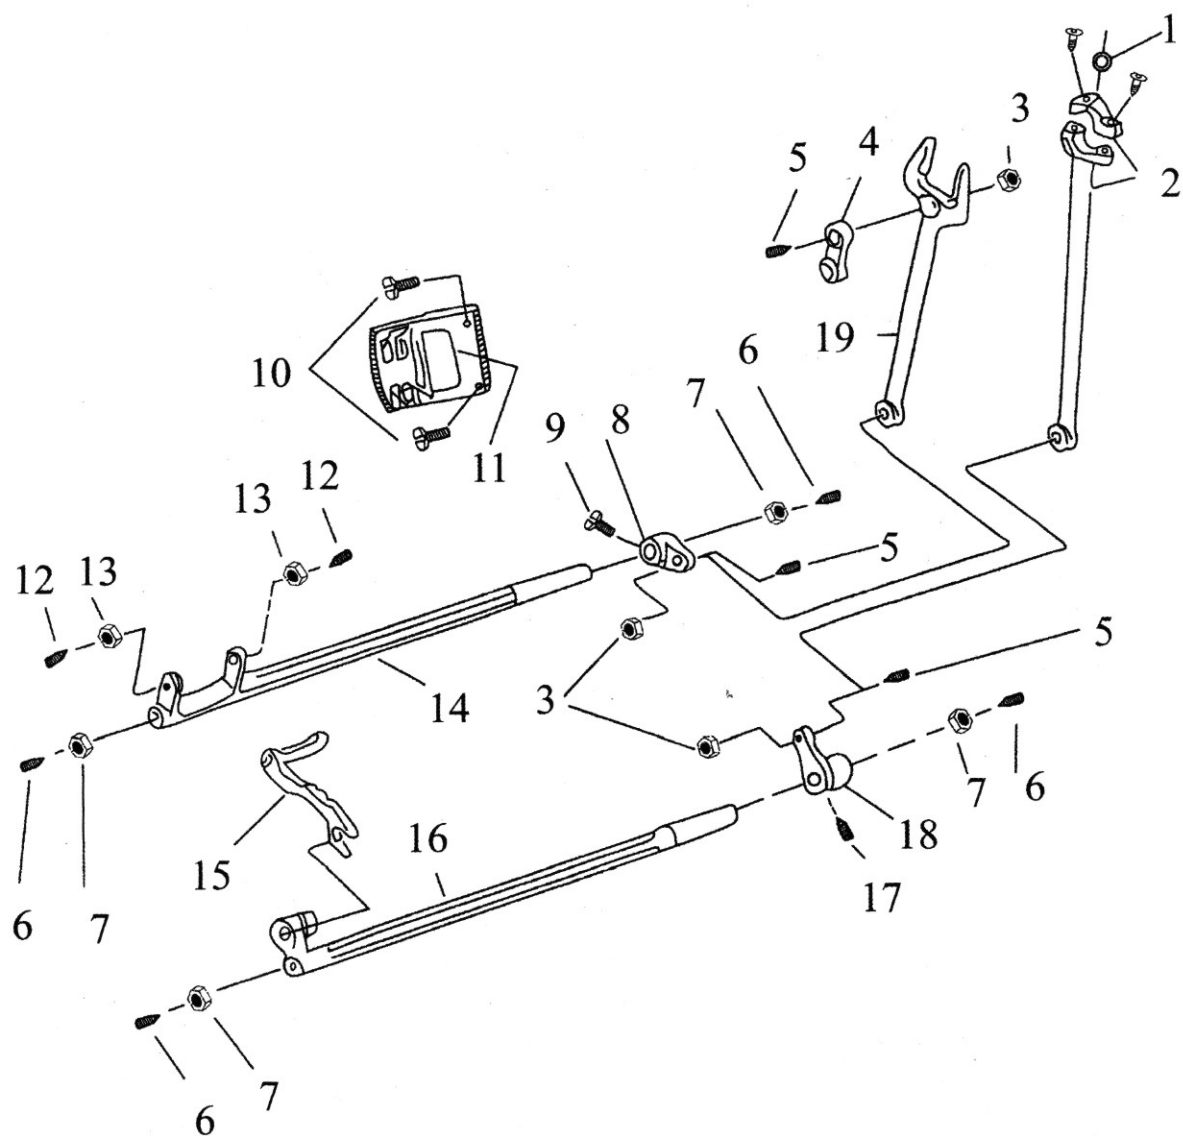

4、勾线部件 Thread-Hooking Components

序号 Seri No.	图 号 Code No.	名 称 Description	适用 产品 Products applicable			
			曲折缝 Curved- stitching	数量 Qty	双针曲折缝 Double Curved- stitching	数量 Qty
1	U43T4-1	旋梭定位板 Locating plate of rotating hook	√	1	√	1
2	U43T4-2	旋梭定位板螺钉 Screw of locating plate	√	1	√	1
3	U43T4-3	梭心套 Bobbin case	√	1	√	1
4	U43T4-4	梭心 Bobbin	√	1	√	1
5	U43T4-5	旋梭 Rotating hook	√	1	√	1
6	U43T4-6	旋梭轴前轴套 Front sleeve of rotating hook shaft	√	1	√	1
7	U43T4-7	旋梭轴前轴套螺钉 Front sleeve screw	√	1	√	1
8	U43T4-8	旋梭轴挡圈 Retainer of rotating hook shaft	√	2	√	2
9	U43T4-9	旋梭轴挡圈螺钉 Retainer screw	√	4	√	4
10	U43T4-10	旋梭轴后轴套 Back sleeve of rotating hook shaft	√	1	√	1
11	U43T4-11	旋梭轴后轴套螺钉 Screw of back sleeve	√	1	√	1
12	U43T4-12	旋梭轴 Rotating hook shaft	√	1	√	1
13	U43T4-13	旋梭轴弧齿锥齿轮螺钉 Screw of arc-cone gear	√	2	√	2
14	U43T4-14	旋梭轴弧齿锥齿轮 Arc-cone gear of rotating hook shaft		1		1
15	U43T4-15	下轴弧齿锥齿轮 Arc-cone gear of lower shaft	√	1	√	1
16	U43T4-16	下轴弧齿锥齿轮螺钉 Screw of Arc-cone gear	√	2	√	2
17	U43T4-17	下轴前后轴套螺钉 Screw	√	2	√	2
18	U43T4-18	下轴前轴套 Front sleeve of lower shaft	√	1	√	1
19	U43T4-19	下轴(立轴)挡圈 Lower shaft retainer	√	3	√	3
20	U43T4-20	下轴(立轴)挡圈螺钉 Retainer screw of lower shaft	√	6	√	6
21	U43T4-21	下轴后轴套 Back sleeve of lower shaft	√	1	√	1
22	U43T4-22	下轴 Lower shaft	√	1	√	1
23	U43T4-23	下轴差动齿轮螺钉 Screw of differential gear(lower shaft)		2		2
24	U43T4-24	下轴差动齿轮 Differential gear	√	1	√	1
25	U43T4-25	立轴差动齿轮螺钉 Screw of differential gear	√	2	√	2
26	U43T4-26	立轴差动齿轮 Differential gear(vertical shaft)	√	1	√	1
27	U43T4-27	立轴下轴套 Lower sleeve of vertical shaft	√	1	√	1
28	U43T4-28	差动滑套 Differential shaft sliding-sleeve	√	1	√	1
29	U43T4-29	下离合套筒 Lower clutch sleeve	√	1	√	1
30	U43T4-30	下离合套筒螺钉 Screw	√	2	√	2
31	U43T4-31	上离合套筒 Upper clutch sleeve	√	1	√	1
32	U43T4-32	上离合套筒螺钉 Screw	√	2	√	2
33	U43T4-33	立轴上轴套 Upper sleeve of vertical shaft	√	1	√	1
34	U43T4-34	立轴上轴套筒螺钉 Screw of upper sleeve	√	1	√	1
35	U43T4-35	立轴弧齿锥齿轮 Arc-cone gear	√	1	√	1
36	U43T4-36	大差动连杆 Differential connecting bar	√	1	√	1
37	U43T4-37	立轴 Vertical shaft	√	1	√	1

4、勾线部件 Thread-Hooking Components

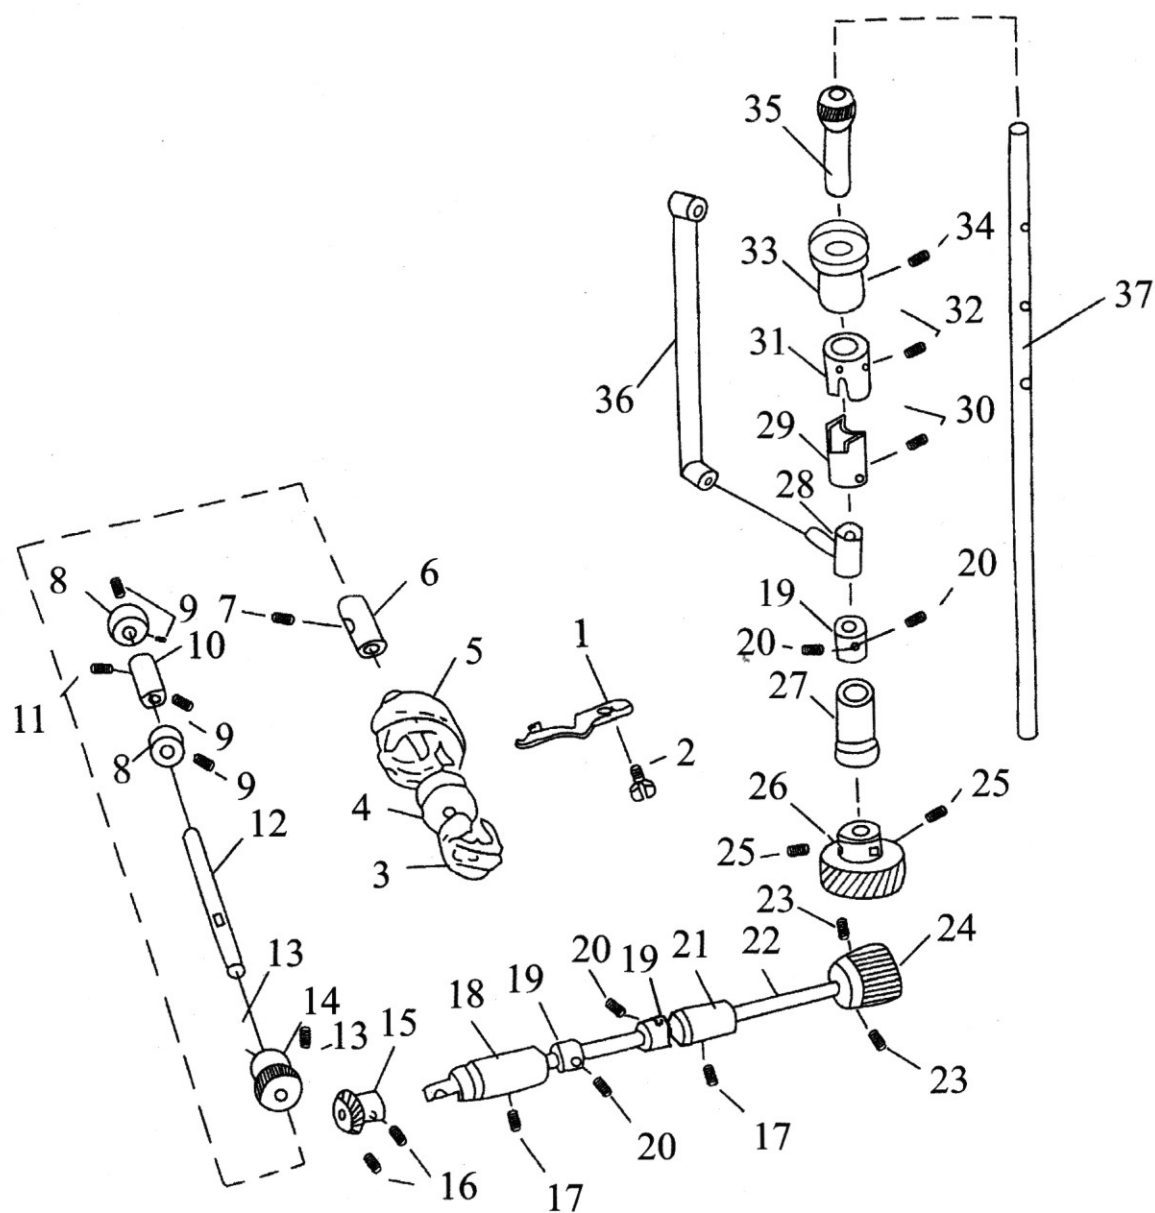


5、摆针部件 Components of swaying needle

序号 Seri No.	图 号 Code No.	名 称 Description	适用 产品 Products applicable			
			曲 折 缝 Curved- stitching	数 量 Qty	双针曲折缝 Double Curved- stitching	数 量 Qty
1	U43T5-1	横针拨叉 Horizontal needle fork	√	1	√	1
2	U43T5-2	摆针轴 Shaft of swaying needle	√	1	√	1
3	U43T5-3	摆针轴螺钉 Screw	√	1	√	1
4	U43T5-4	摆针齿轮 Gear of swaying needle	√	1	√	1
5	U43T5-5	偏心挡圈 Eccentric retainer	√	1	√	1
6	U43T5-6	摆针偏心凸轮连接螺钉 Connecting screw	√	2	√	2
7	U43T5-7	摆针偏心凸轮 Eccentric cam	√	1	√	1
8	U43T5-8	摆针偏心凸轮后挡圈 Rack retainer	√	1	√	1
9	U43T5-9	摆针轴挡圈螺钉 Retainer screw	√	2	√	2
10	U43T5-10	摆针轴挡圈 Retainer of shaft	√	1	√	1
11	U43T5-11	摆针滑块连接螺钉 Connecting screw	√	1	√	1
12	U43T5-12	小左动连杆 Differential connecting bar	√	1	√	1
13	U43T5-13	针杆偏心销 Eccentric pin of needle bar	√	1	√	1
14	U43T5-14	摆针滑块 Sliding block of swaying needle	√	1	√	1
15	U43T5-15	摆针导块座 Guide base of swaying needle	√	1	√	1
16	U43T5-16	摆针导块座螺钉 Screw of guide base	√	1	√	1
17	U43T5-17	摆针调节连杆 Adjustable connecting bar	√	1	√	1
18	U43T5-18	差动连杆连接螺钉 Connecting screw of differential connecting bar	√	3	√	3
19	U43T5-19	摆针定位块 Locating block of swaying needle	√	1	√	1
20	U43T5-20	摆针定位块连接销 Connecting pin of guide	√	2	√	2
21	U43T5-21	摆针定位块调节螺钉 Adjusting screw of locating block	√	2	√	2
22	U43T5-22	摆针定位块紧固螺母 Fastening nut of locating crank	√	2	√	2
23	U43T5-23	摆针调节曲柄套螺钉 Screw for adjusting crank sleeve	√	1	√	1
24	U43T5-24	摆针调节曲柄弹簧 Spring for adjusting crank	√	1	√	1
25	U43T5-25-0	摆针调节曲柄组件 Adjusting crank component	√	1	√	1
26	U43T5-26	摆针扳手定位挡圈螺钉 Screw of spanner locating retainer	√	2	√	2
27	U43T5-27	摆针扳手定位挡圈 Locating retainer of spanner	√	1	√	1
28	U43T5-28	摆针扳手轴套垫圈 Washer	√	1	√	1
29	U43T5-29	摆针扳手轴套 Spanner sleeve	√	1	√	1
30	U43T5-30/31	摆针扳手组件 Spanner component	√	1	√	1
31	U43T5-34	摆针针距左定位块 Left locating block for stitch wide	√	1	√	1
32	U43T5-35	摆针针距右定位块 Right locating block for stitch wide	√	1		
33	U43T5-36	摆针针距定位垫圈 Washer of locating block	√	2	√	2
34	U43T5-37	摆针针距定位块螺钉 Screw of locating block	√	2	√	2
35	U43T5-38	摆针定位螺钉 Locating screw	√	2	√	2
36	U43T5-39	摆针针距定位架螺钉 Locating rack for stitch wide	√	2	√	2
37	U43T5-40	摆针针距定位架 Screw of locating rack	√	1	√	1
38	U43T5-41	摆针针距调节架(A) Adjusting rack (A) for stitch wide	√	1	√	1
39	U43T5-42	摆针针距调节架(B) Adjusting rack (B)	√	1	√	1
40	U43T5-43	摆针针距定位架拉簧 Extension spring of locating rack	√	1	√	1

序号 Seri No.	图 号 Code No.	名 称 Description	适 用 产 品 Products applicable			
			曲 折 缝 Curved- stitching	数 量 Qty	双 针 曲 折 缝 Double Curved- stitching	数 量 Qty
41	U43T5-44	差动连接轴挡圈 Retainer of differential connecting shaft	√	1	√	1
42	U43T5-45	差动曲柄轴 Differential crank	√	1	√	1
43	U43T5-48	差动连接轴 Differential connecting shaft	√	1	√	1
44	U43T5-49-0	差动曲柄定位架组件 Locating rack component	√	1	√	1
45	U43T5-50	定位架轴套支头螺钉 Set screw of locating rack sleeve	√	1	√	1
46	U43T5-51	差动曲柄定位架螺钉 Screw of crank locating rack	√	2	√	2
47	U43T5-52	拉簧螺钉 Screw of extension spring	√	1	√	1
48	U43T5-53	大差动连杆连接螺钉 Connecting screw	√	1	√	1
49	U43T5-54	小油盘 Oil tray	√	1	√	1
50	U43T5-55	油纱带 Oil gauze	√	1	√	1
51	U43T5-56	油盘毡 Felt of oil tray	√	1	√	1
52	U43T5-57	平垫圈 Flat washer	√	2	√	2
53	U43T5-58	小油盘螺钉 Screw of oil tray	√	2	√	2
54	U43T5-59	弹性垫圈 Elastic washer	√	2	√	2
55	U43T5-60	摆针针距右定位块 Right locating block for stitch wide			√	1
56	U43T5-61	右、中、右定位架 Locating rack	√	1	√	1
57	U43T5-62	左、中、右定位架螺钉 Screw	√	2	√	2
58	U43T5-63	左、中、右扳手组件 Handle component	√	1	√	1
59	U43T5-64	左、中、右定位螺钉 Locating pin	√	1	√	1
60	U43T5-65	左、中、右定位拨杆 Adjusting rack	√	1	√	1
61	U43T5-66	左、中、右调节架螺钉 Screw	√	2	√	2
62	U43T5-67	左、中、右定位螺钉, 螺母 Screw, nut	√	2	√	2


5、摆针部件 Components of Swaying Needle

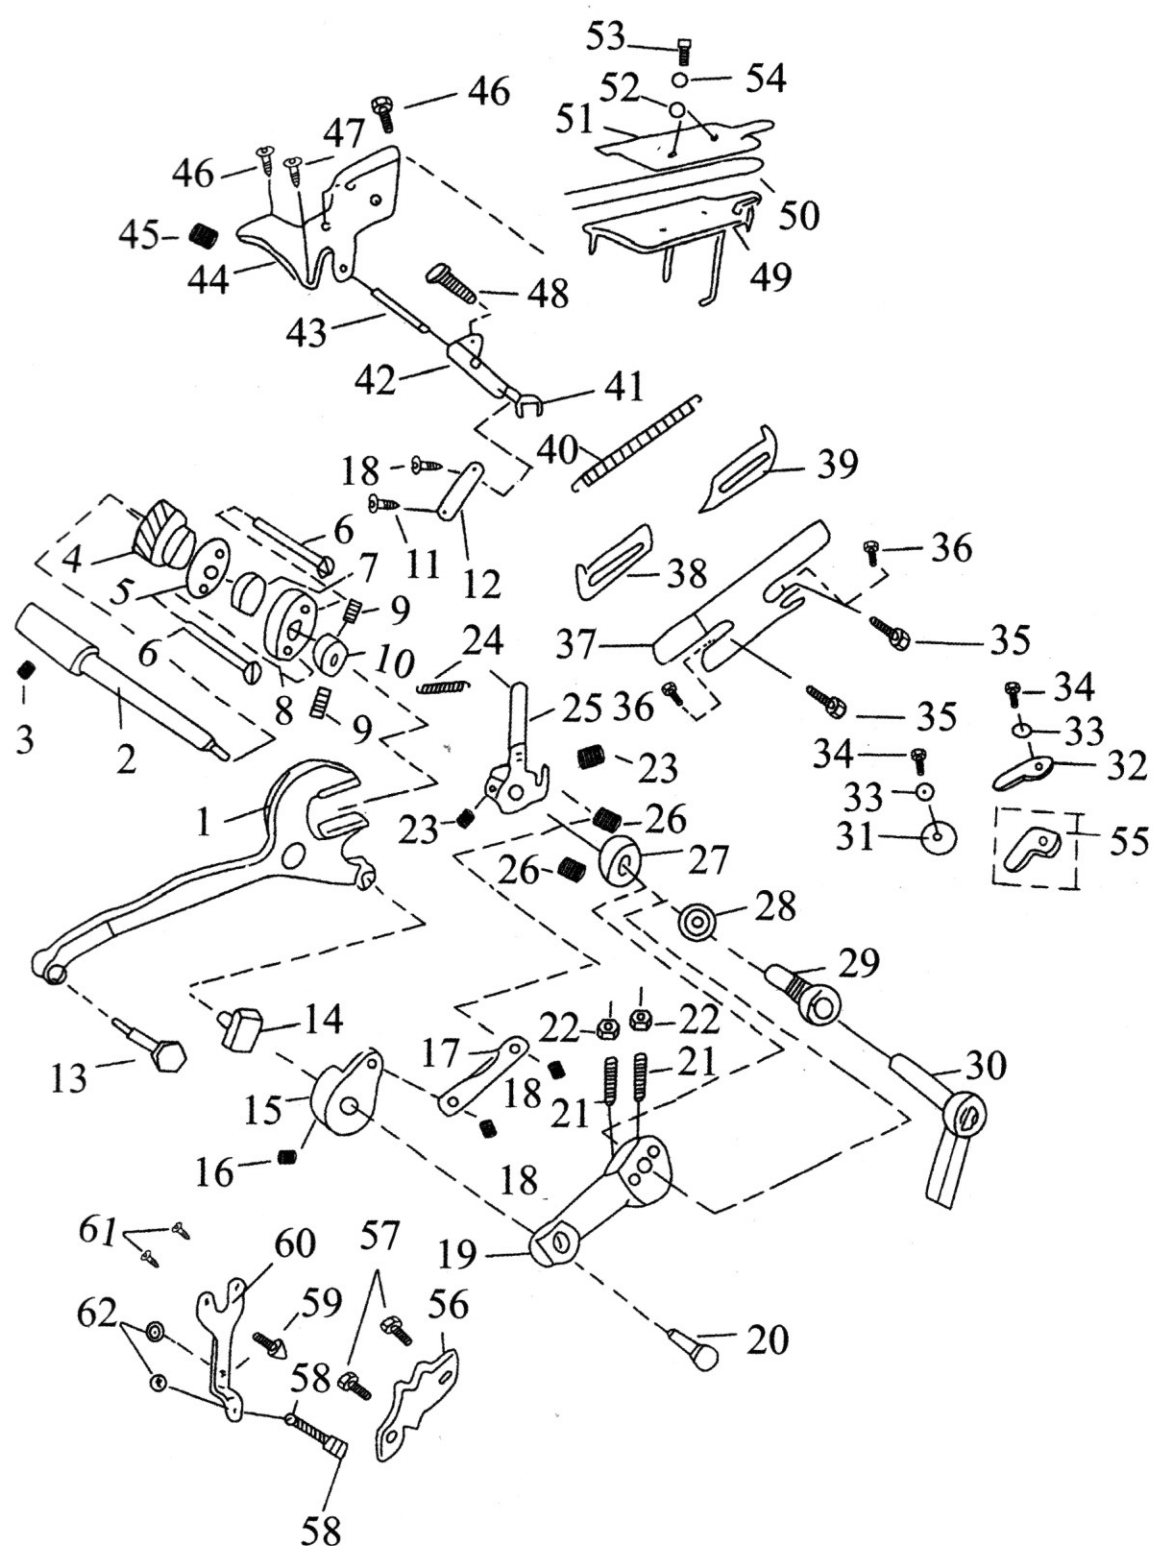

6、压脚部件 Components of presser foot

序号 Seri No.	图 号 Code No.	名 称 Description	适 用 产 品 Products applicable			
			曲 折 缝 Curved- stitching	数 量 Qty	双 针 曲 折 缝 Double Curved- stitching	数 量 Qty
1	U43T6-1	调压螺钉 Screw for pressures-adjusting	√	1	√	1
2	U43T6-2	压杆簧 Pressing bar spring	√	1	√	1
3	U43T6-3	压紧杆 Presser bar	√	1	√	1
4	U43T6-4	压脚螺钉 Screw of presser foot	√	1	√	1
5	U43T6-5-0	压脚组件 Presser foot component	√	1	√	1
6	U43T6-6	压脚扳手销 Spanner pin	√	1	√	1
7	U43T6-7	压脚扳手 Spanner	√	1	√	1
8	U43T6-8	压脚扳手销螺钉 Spanner pin screw	√	1	√	1
9	U43T6-9	压脚导架 Presser bar bracket	√	1	√	1
10	U43T6-10	压脚导架螺钉 Screw of bracket	√	1	√	1
11	U43T6-11	挺线定位座 Locating base	√	1	√	1
12	U43T6-12	膝提杠杆座螺钉 Screw of lever base	√	2	√	2
13	U43T6-13-0	膝提杠杆组件 Component of locating base	√	1	√	1
14	U43T6-14	开口销 Open-pin	√	3	√	3
15	U43T6-15	抬压脚拉杆 Presser foot rod	√	1	√	1
16	U43T6-16	膝提横针拉杆 Rod of horizontal needle	√	1	√	1
17	U43T6-17	抬压脚杠杆 Presser foot lever	√	1	√	1
18	U43T6-18	抬压脚杠杆螺钉 Lever screw	√	1	√	1

6、压脚部件 Components of presser foot

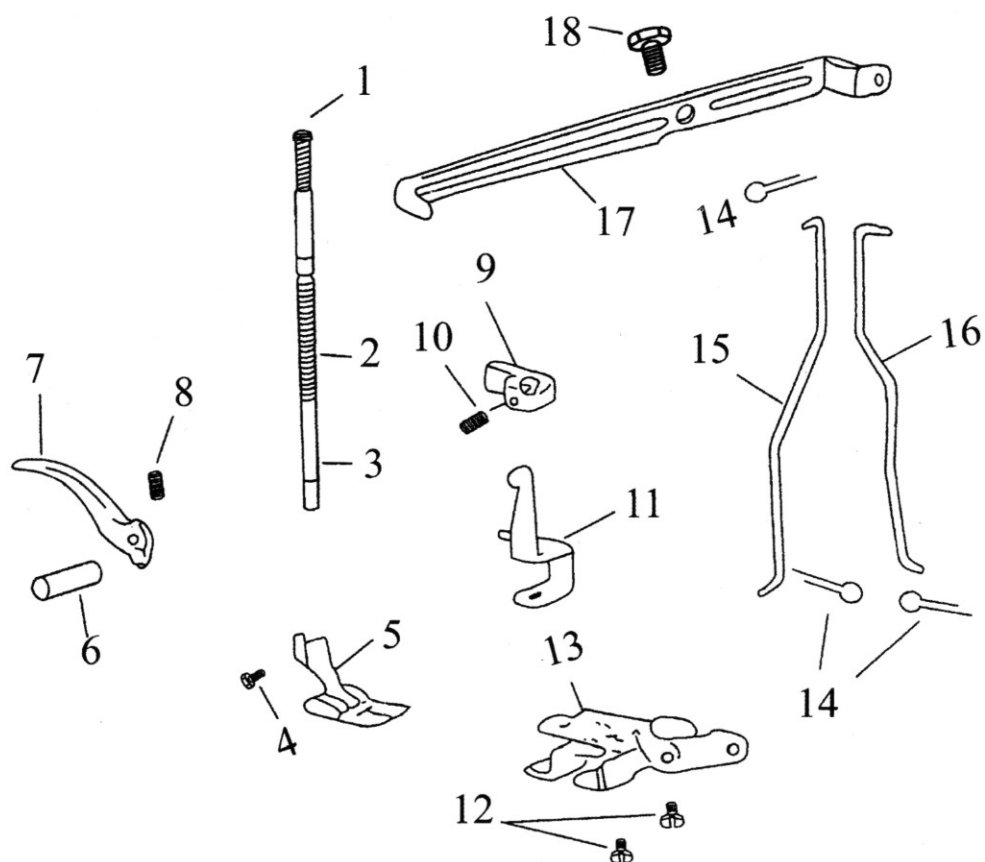

7、倒顺针距部件 Components of Needle Distance of Reversal Stitch

序号 Seri No.	图 号 Code No.	名 称 Description	适用 产品 Products applicable			
			曲折缝 Curved- stitching	数量 Qty	双针曲折缝 Double Curved- stitching	数量 Qty
1	U43T7-1	针距调节螺杆 Feed adjusting screw	√	1	√	1
2	U43T7-2	针距座销 Pin	√	1	√	1
3	U43T7-3	针距座支头螺钉 Set screw	√	1	√	1
4	U43T7-4	针距座 Feed regulator	√	1	√	1
5	U43T7-5	倒针复位拉簧 Restoring extension spring of reversal stitch	√	1	√	1
6	U43T7-6	倒针复位拉簧勾螺钉 Screw of extension spring hook	√	1	√	1
7	U43T7-7	倒针复位拉簧勾 Restoring extension-spring hook	√	1	√	1
8	U43T7-8	倒针曲柄 Crank of reversal stitch	√	1	√	1
9	U43T7-10	倒针曲柄螺钉 Crank screw	√	1	√	1
10	U43T7-11	倒针扳手轴 Spanner shaft	√	1	√	1
11	U43T7-12	倒针扳手 Spanner of reversal stitch	√	1	√	1
12	U43T7-13	倒针扳手螺钉 Spanner screw	√	1	√	1
13	U43T7-14	针距旋钮螺钉 Knob screw	√	1	√	1
14	U43T7-15	针距指示牌 Indication plate for needle distance	√	1	√	1
15	U43T7-16	针距旋钮 Knob	√	1	√	1
16	U43T7-17	针距定位钉 Locating Pin	√	1	√	1
17	U43T7-18	针距定位钉压簧 Pressing spring of locating pin	√	1	√	1
18	U43T7-19	方牙螺套 Toothed nut	√	1	√	1
19	U43T7-20	方牙螺套支头螺钉 Screw of toobthed nut	√	1	√	1
20	U43T7-21	针距指示牌垫圈 Washer of Indication plate	√	1	√	1

7、倒顺针距部件 Components of Needle Distance of Reversal Stitch

